

# Installation Instructions

Model: Soft-2




1. Attach mounting bracket level and securely.



2. Run a bead of caulk around the lower area below and around cable entry opening. This prevents light spillage on uneven surfaces.



3. Secure light fitting in position over mounting bracket and tighten the two m4 screws against plaster until firmly secured.

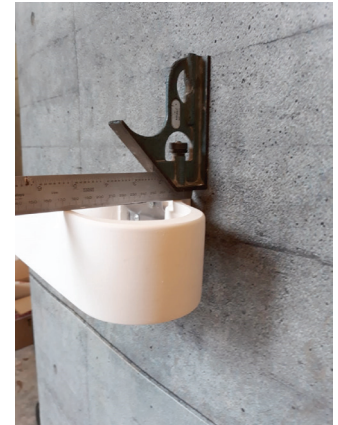

4. Gently press down on the light fitting until the light is level.



5. Once level use caulking to smoothen the interface between wall and light fitting.



6. Clean off excess caulking to finish.



6. Drop in diffuser.



6. Insert lamp holder and connect wires.